


Door Bell Strobe Light Wiring Diagram

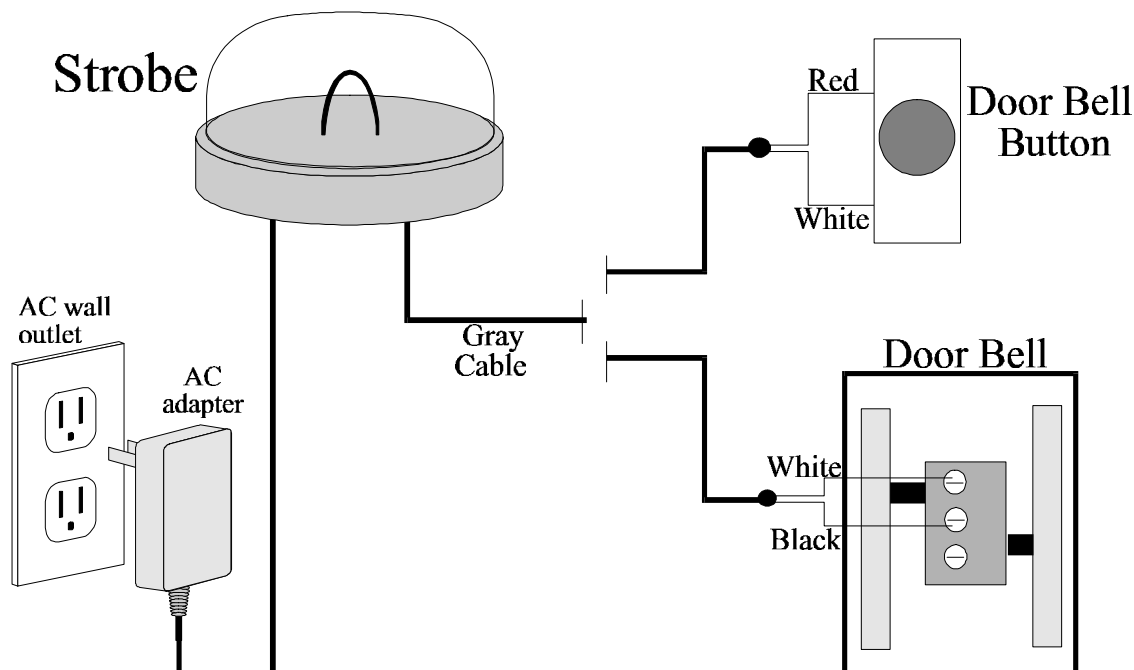

- 1 - Remove the unit from the package.
- 2 - Mount the Strobe in a visible location making sure that the AC adapter will reach a wall outlet.

FOR USE WITH A DOORBELL

- 3 - Connect the WHITE and BLACK wires from the GRAY cable on the strobe to the existing door bell. (12 - 16 VAC)

FOR USE WITHOUT A DOORBELL

- 3 - Connect the RED and WHITE wires from the GRAY cable on the strobe to a standard doorbell button.

--- CAUTION ---

NEVER use all 3 wires from the GRAY cable together

- 4 - Plug the AC Adapter into the Wall Outlet.
- 5 - Push and release the door bell button. The Strobe should begin to flash. If the strobe does NOT flash, check the installation.
- 6 - The unit will automatically reset.

Manufactured By:
Lari-Jo Inc.

Web site: www.lari-jo.com
611 Hall Street - Warren, Ohio 44483

E-mail: rap@lari-jo.com
Phone: 330-392-6800 Fax: 330-393-9301