


Contractor Series DBSLWC-8 Door Bell Strobe/Chime Installation Instructions

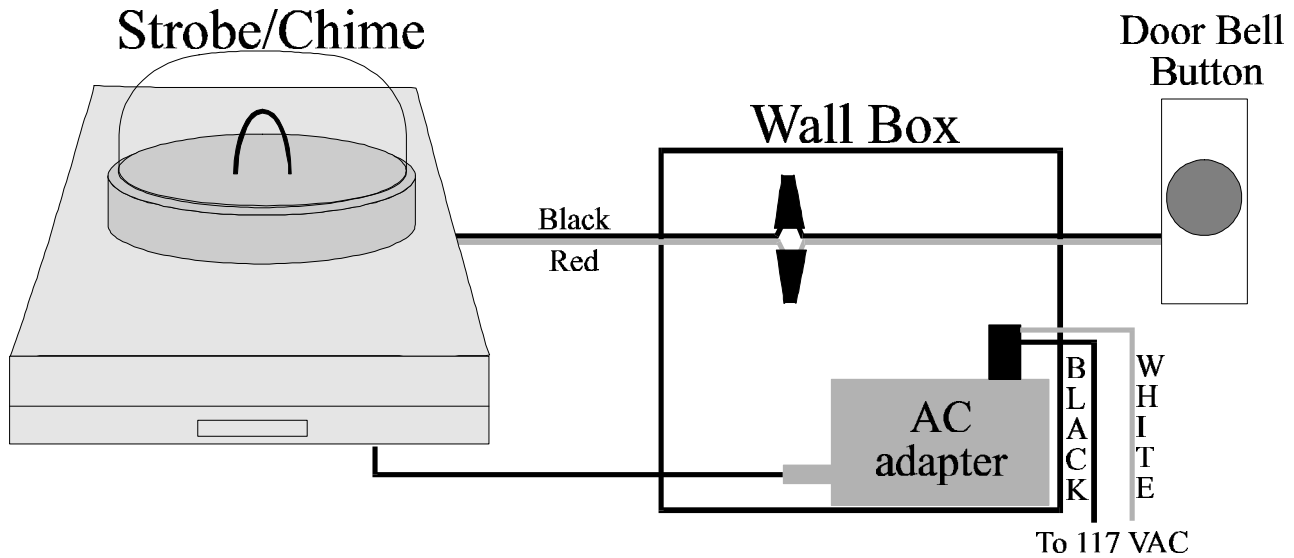

Wiring Diagram

- 1 - Remove the unit from the package.
 - 2 - Connect the red / black wires from the Strobe/Chime unit to the wires from the Door Bell Button.
- NOTE! - Be sure the 117-vac power is turned off before making connections.**
- 3 - Connect the black / white wires from the Strobe/Chime Power Supply to the 117-vac source.
 - 4 - Open Strobe/Chime case back. (See Figure 1)
 - 5 - Mount the Strobe/Chime unit to the Wall Box using the 4 screws that are supplied.
 - 6 - Snap front of Strobe/Chime case on. Start with the top edge of the case aligned with the top of the back.
 - 7 - Turn on the 117-vac power to the Strobe Power Supply.
 - 8 - Push and release the Door Bell Button. The Strobe will begin to flash and the Chime will begin to sound.
 - 9 - The Strobe/Chime will automatically reset.

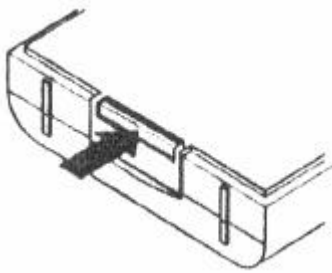


Figure 1

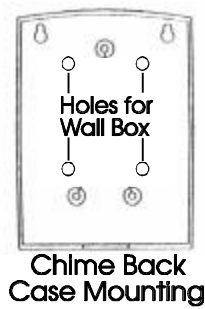


Figure 2



Figure 3

Manufactured By:
Lari-Jo Inc.

Web site: www.lari-jo.com E-mail: rap@lari-jo.com
611 Hall Street - Warren, Ohio 44483 Phone: 330-392-6800 Fax: 330-393-9301