


Contractor Series TRSL-10  
Telephone Ringer Strobe Light Installation Instructions

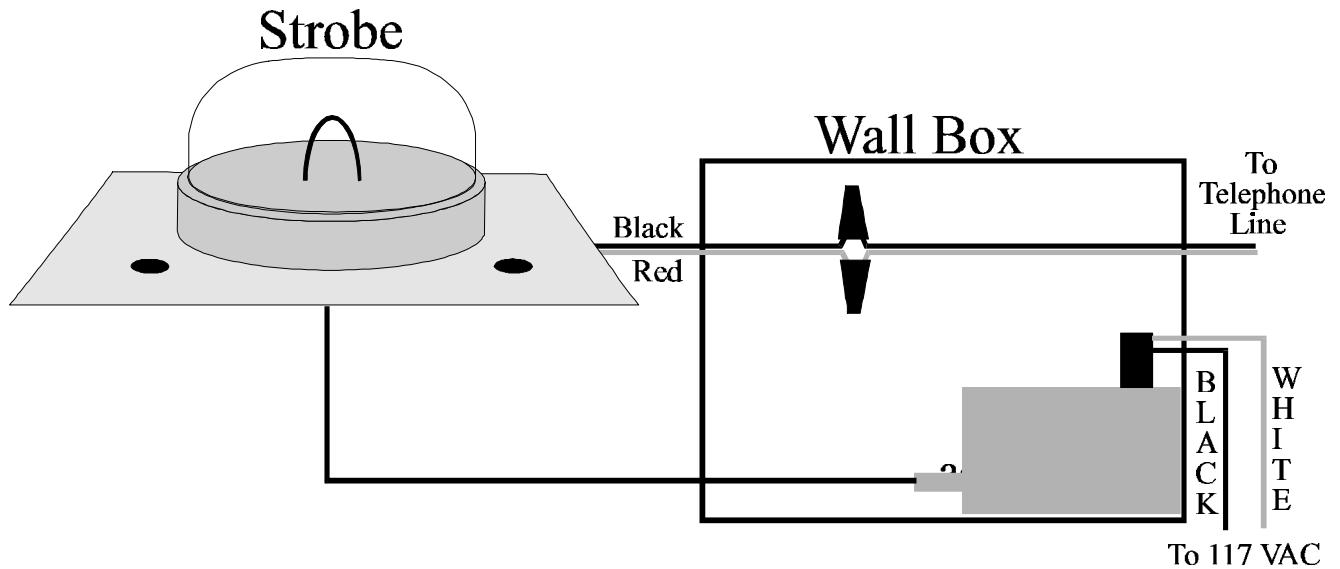

Wiring Diagram

1 - Remove the unit from the package.

**NOTE! - Be sure the 117-VAC power is turned off before making connections.**

2 - Connect the red / black wires from the Strobe unit to the wires from the analog telephone line.

3 - Connect the black / white wires from the Strobe Power Supply to the 117-VAC source.

4 - Mount the Strobe unit to the Wall Box using the 4 screws that are supplied.

5 - Turn on the 117-vac power to the Strobe Power Supply.

6 - When a ring is detected on the phone line, the Strobe will begin to flash.

7 - The Strobe Light will automatically reset when ringing stops.

Manufactured By:  
**Lari-Jo Inc.**

Web site: [www.lari-jo.com](http://www.lari-jo.com)  
611 Hall Street - Warren, Ohio 44483

E-mail: [rap@lari-jo.com](mailto:rap@lari-jo.com)  
Phone: 330-392-6800 Fax: 330-393-9301